

COVERT PUSH



**USER MANUAL &
WARRANTY GUIDE**



**FOLLOW US ON
INSTAGRAM @NEUPIPES**



HOW TO USE:

- 1 - PULL BOTTOM CAP TO REVEAL HIDDEN COMPARTMENT
- 2 - SCREW IN 510 THREAD CARTRIDGE (NOT INCLUDED)
- 3 - SNAP BOTTOM BACK INTO PLACE VIA MAGNETIC LOCK
- 4 - PUSH THE BUTTON ON THE BOTTOM OF THE DEVICE 5 TIMES TO POWER ON/OFF
- 5 - PUSH THE BUTTON 3 TIMES TO SET VOLTAGE, INDICATED BY THE LED LIGHT
- 6 - PUSH THE BUTTON 2 TIME TO PREHEAT (15s MAX, GOOD FOR THICKER OILS)
- 7 - PUFF TO VAPE, NO NEED TO PUSH THE BUTTON TO DRAW

BATTERY LEVEL INDICATOR:

PRESS BUTTON 1 TIME TO DISPLAY BATTERY LEVEL.

GREEN LED = FULL BATTERY

BLUE LED = ABOUT 50% BATTERY

RED LED = LOW BATTERY

VOLTAGE INDICATOR:

PRESS BUTTON 3 TIMES OR RAPID DRAW 3 TIMES WITHIN 1.5 SECONDS TO ADJUST VOLTAGE.

GREEN LED = 2.8V

BLUE LED = 3.4V

RED LED = 3.8V

IMPORTANT SAFETY INFORMATION:

- 1 - INTERNAL PARTS OF THE DEVICE REACH HIGH TEMPERATURES.
- 2 - DO NOT DISMANTLE BEYOND CLEANING AND MAINTENANCE, DOING SO WILL VOID THE WARRANTY.
- 3 - DO NOT USE IF DAMAGED.

STORAGE

- 1 - STORE THE DEVICE AT LOW TEMPERATURE BELOW 68° FAHRENHEIT IS RECOMMENDED LOW HUMIDITY NO DUST AND NO CORROSIVE GAS ATMOSPHERE.
- 2 - KEEP THE DEVICE AWAY FROM CHILDREN AND PETS TO AVOID ANY ACCIDENTS.



SCAN ME

**SCAN TO SEE
THE WARRANTY
POLICY**